


Late Time Response = LTR

The late time interval of the [pressure transitions](#) during which [bottom-hole pressure](#) is evolving under [Boundary Dominated Flow \(BDF\)](#) well flow regime (see [LTR](#) at **Fig. 1**)

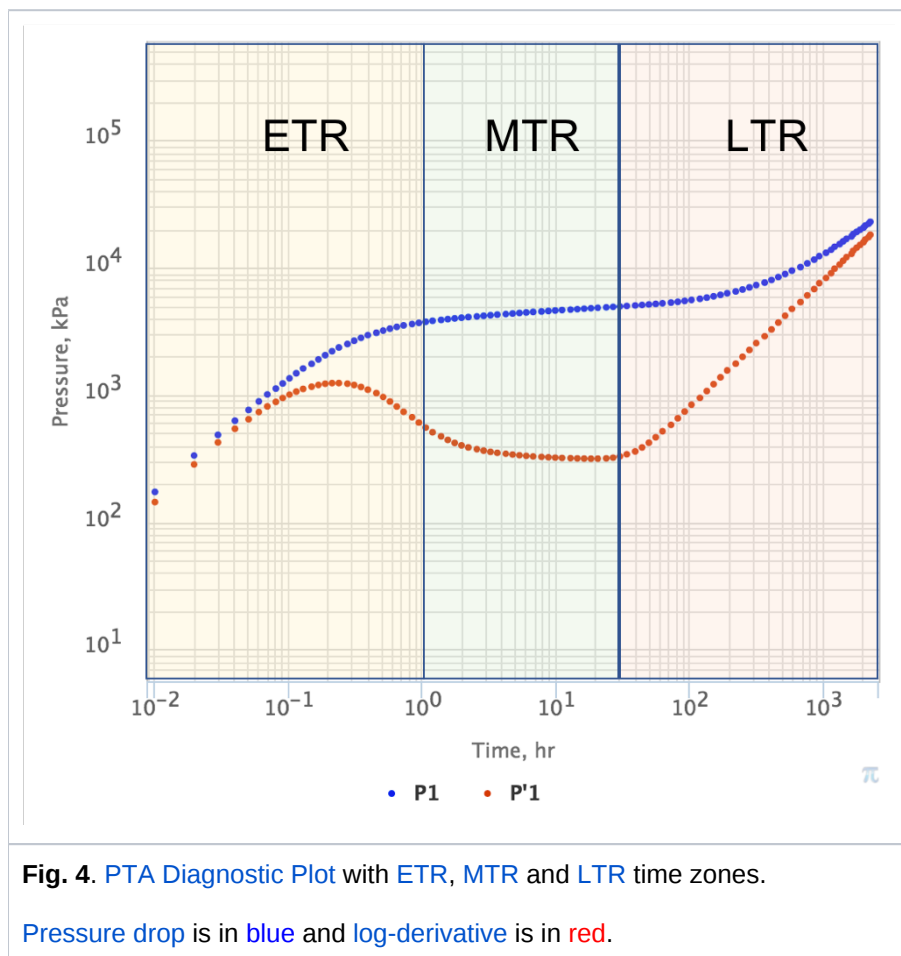

See Also

[Petroleum Industry](#) / [Upstream](#) / [Subsurface E&P Disciplines](#) / [Well Testing](#) / [Pressure Testing](#) / [Pressure Transient Analysis \(PTA\)](#) / [PTA Diagnostic Plot](#)

[[Well & Reservoir Surveillance](#)] [[Pressure Diffusion](#)] [[ETR](#)] [[MTR](#)]