

Fluid Conductivity Log = FCOND

@wikipedia

Fluid Conductivity record along the borehole.

Log Name	FCOND		
Math Symbol	σ_f		
Logging Tool	Fluid Conductivity & Resistivity Logging Tool		
Model	Fluid Conductivity & Resistivity @model		
Units	SI	Oil Metric	Oil Field
	S / m	S / m	S / m

Fluid Conductivity Log and Fluid Resistivity Log are reciprocal to each other and used interchangeably in practise.

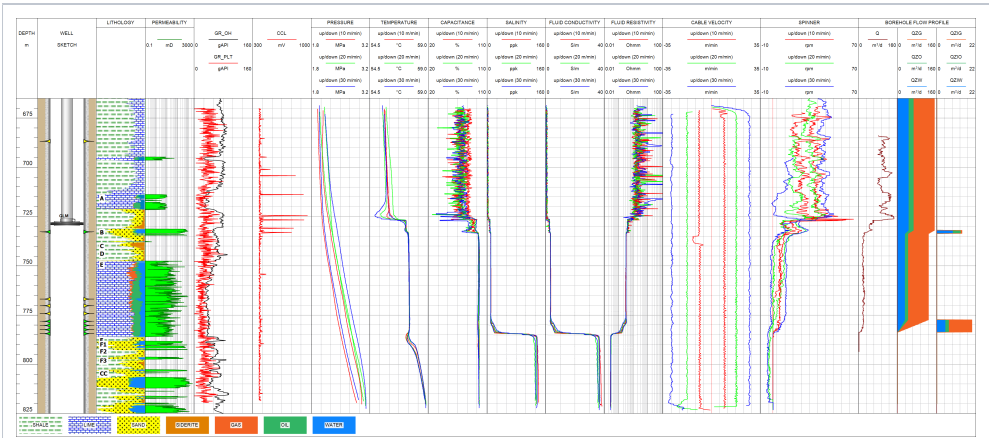


Fig. 1 – Example of Fluid Conductivity Log (FCOND).

See Also

Petroleum Industry / Upstream / Data Acquisition / Well & Reservoir Surveillance / Well logging / Cased-Hole Logging / Production Logging (PLT) / Borehole Flow Profile (BFP)

Subsurface E&P Disciplines / Fluid Analysis / Fluid Conductivity

[Fluid Resistivity Log (FRES)]

