

Fluid Resistivity Log = FRES

@wikipedia

Fluid Resistivity record along the borehole.

Log Name	FRES		
Math Symbol	ρ_f		
Logging Tool	Fluid Conductivity & Resistivity Logging Tool		
Model	Multiphase Fluid Conductivity @model		
Units	SI	Oil Metric	Oil Field
	· m	· m	· m

Fluid Conductivity Log and Fluid Resistivity Log are reciprocal to each other and used interchangeably in practise.

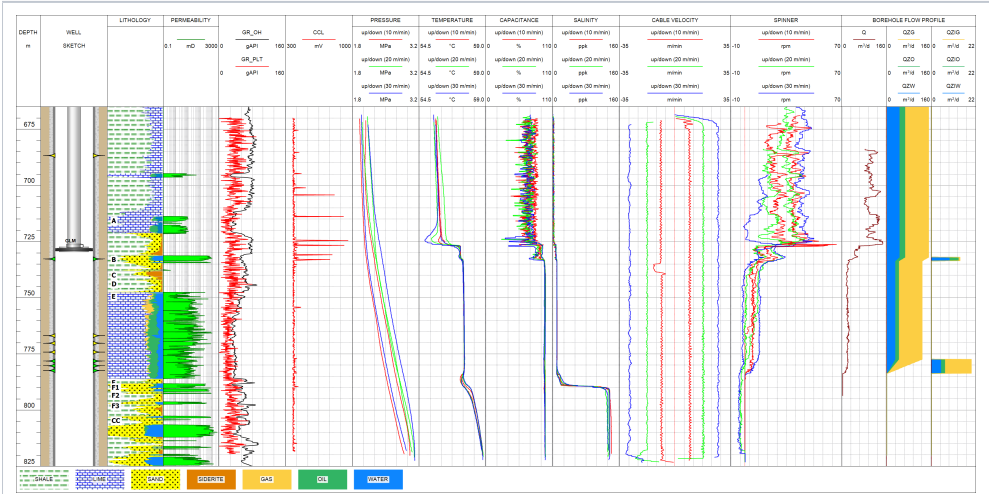


Fig. 1 – Example of Fluid Resistivity Log (FRES).

See Also

Petroleum Industry / Upstream / Data Acquisition / Well & Reservoir Surveillance / Well logging / Cased-Hole Logging / Production Logging (PLT) / Borehole Flow Profile (BFP)

Subsurface E&P Disciplines / Fluid Analysis / Fluid Resistivity

[Fluid Conductivity Log (FCOND)]

