

Fracture width = w_f

Synonym: [Fracture width](#) = [Fracture aperture](#)

The average size w_f of the transversal [fracture](#) opening (see **Fig. 1**).

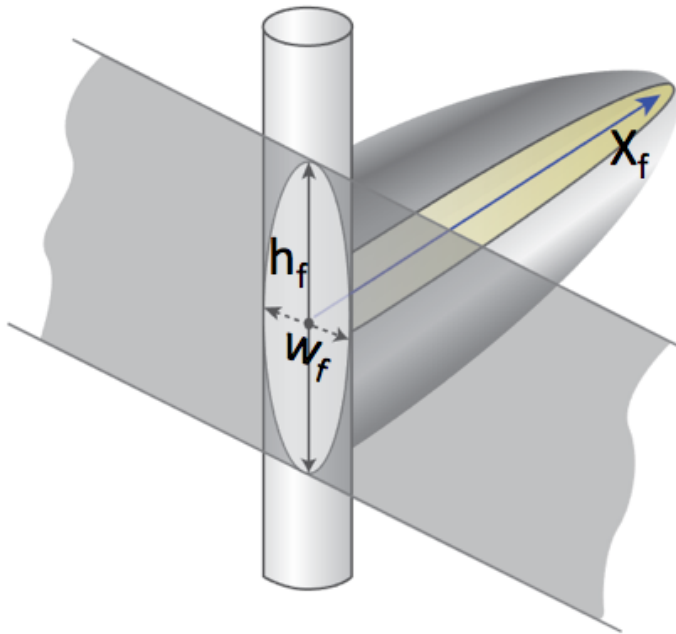


Fig. 1 – [Hydraulic fracture](#) schematic showing [fracture half-length](#) (X_f), [fracture height](#) (h_f) and [fracture width](#) (w_f).

See Also

[Geology](#) / [Rocks](#) / [Fracture](#)

[[Fracture](#)] [[Infinite conductivity fracture](#)] [[Finite conductivity fracture](#)]

[[Petroleum Industry](#) / [Upstream](#) / [Well](#) / [Well-Reservoir Contact \(WRC\)](#) / [Hydraulic Fracture](#)]

[[Production](#) / [Subsurface Production](#) / [Well & Reservoir Management \(WRM\)](#) / [Well stimulation](#) / [Hydraulic Fracturing](#)]

[[Hydraulic Fracture @model](#)]